



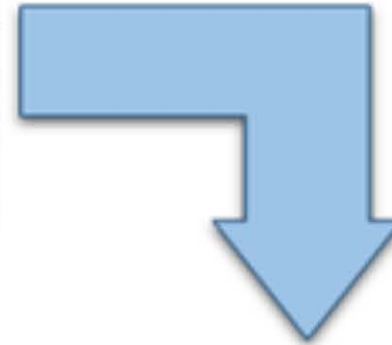

1. Clean windshield with an alcohol wipe and place sticker tag in the upper left corner on windshield (on driver's side, as displayed in image, oil change sticker location)

2. Hold by the edges of the tag and pull off clear plastic liner (as shown on the back of the tag)

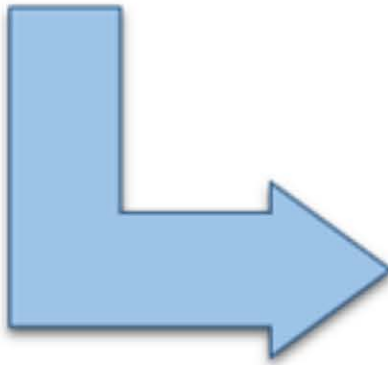

3. Press tag firmly on windshield – the driver's view will be TransCore logo with the GNOEC phone number and your toll tag number (LPC. XXXXXXXX)

